


# FORTIS U-SHAPE

## Assembly Instructions

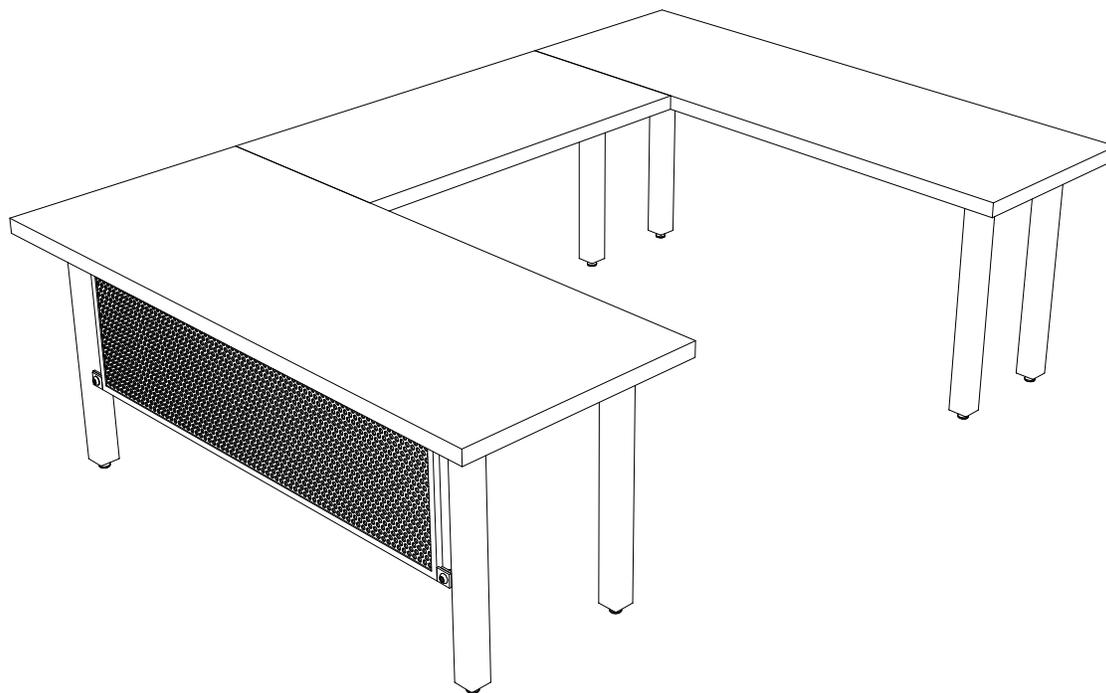

### **Thank you for your purchase!**

Iron Age Office furniture is uniquely and individually fabricated. For this reason, your furniture is pre-assembled and labeled before shipping. Labels are marked on the underside of the furniture. Most furniture is then deconstructed prior to shipping. Pieces that uniquely correspond can typically be found on the same pallet.

Assembly is best completed by keeping the pieces that correspond together. Clear your work area of anything that could scratch furniture surfaces. If possible, cover your work area with a clean, soft blanket. Carefully flip any wooden tops over and inspect the bottom sides for markings.

Match legs, flat brackets, etc.  
to the appropriate labels.

If you need further assistance of any kind,  
please contact:

Iron Age Office Operations Manager

Henry Dover

678-725-1473 (c)

[hd@ironageoffice.com](mailto:hd@ironageoffice.com)

# HARDWARE

Screws are shown actual size. You may receive extra hardware with your unit.

①

14-10 LAG BOLT  
QTY: 44





## Tools Required

#3 Square Drive

②



SCREEN BOLT  
QTY: 4

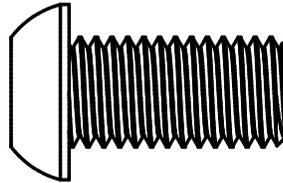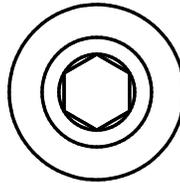

3/8 Hex Drive

③



SCREEN NUT  
QTY: 4

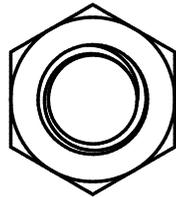

15/16 Crescent Wrench


④

LEVELING FOOT  
QTY: 8

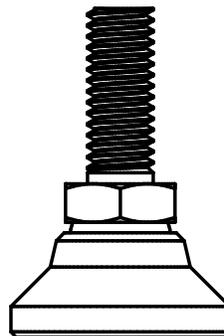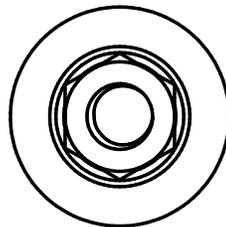

9/16 Crescent Wrench

# PARTS

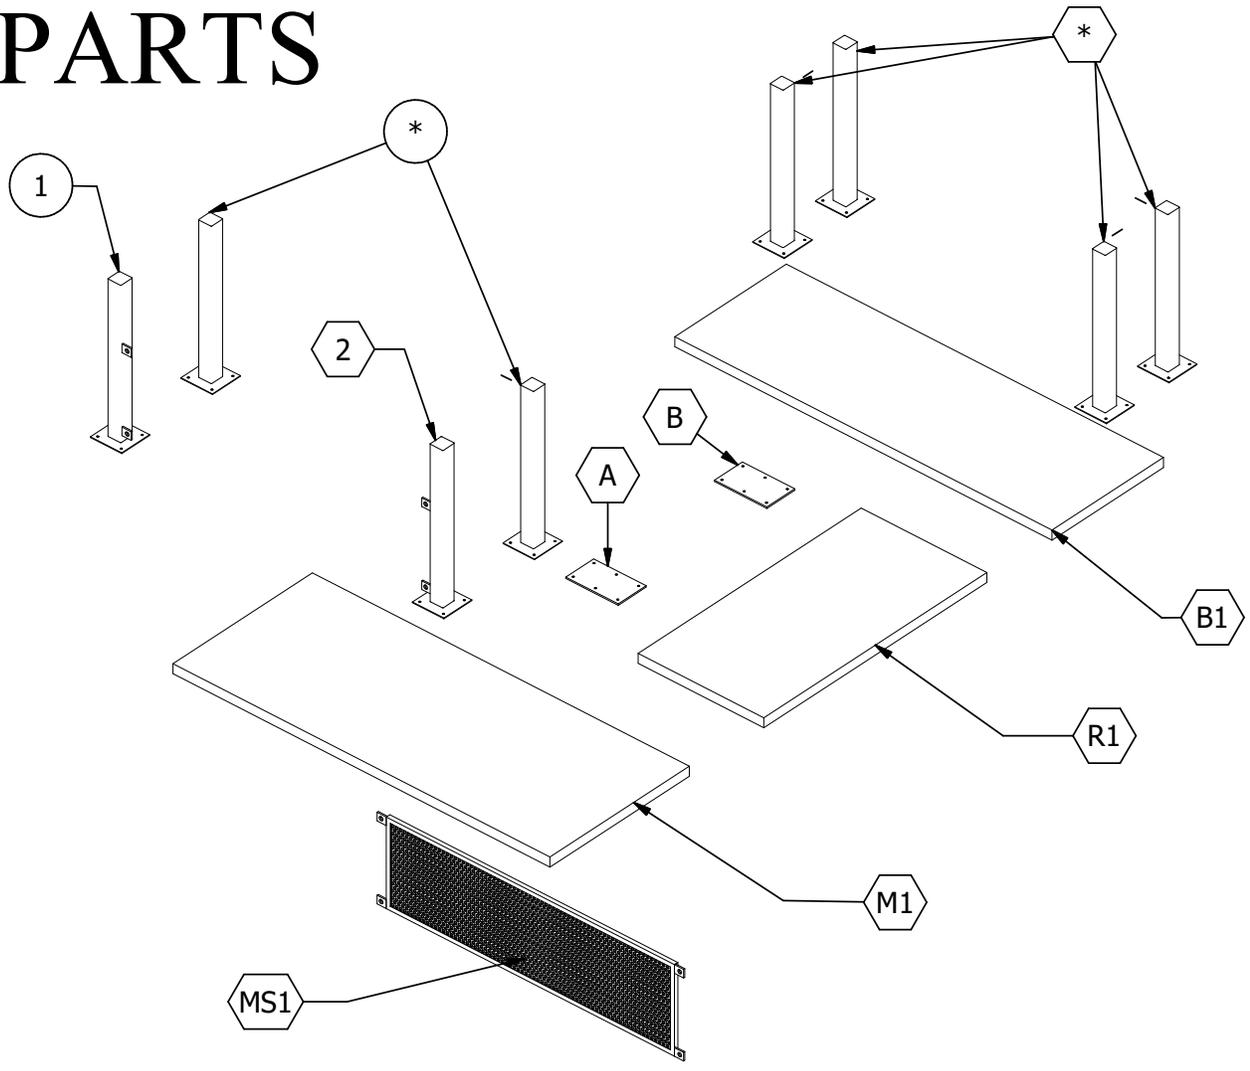


- |   |                  |   |             |
|---|------------------|---|-------------|
|  | LEFT TABBED LEG  |  | MAIN TOP    |
|  | RIGHT TABBED LEG |  | RETURN TOP  |
|  | STANDARD LEG     |  | BACK TOP    |
|  | SPLICE PLATE     |  | MAIN SCREEN |
|  | SPLICE PLATE     |   |             |

# ASSEMBLY


## STEP 1

Place wood tops face down on a clean surface.

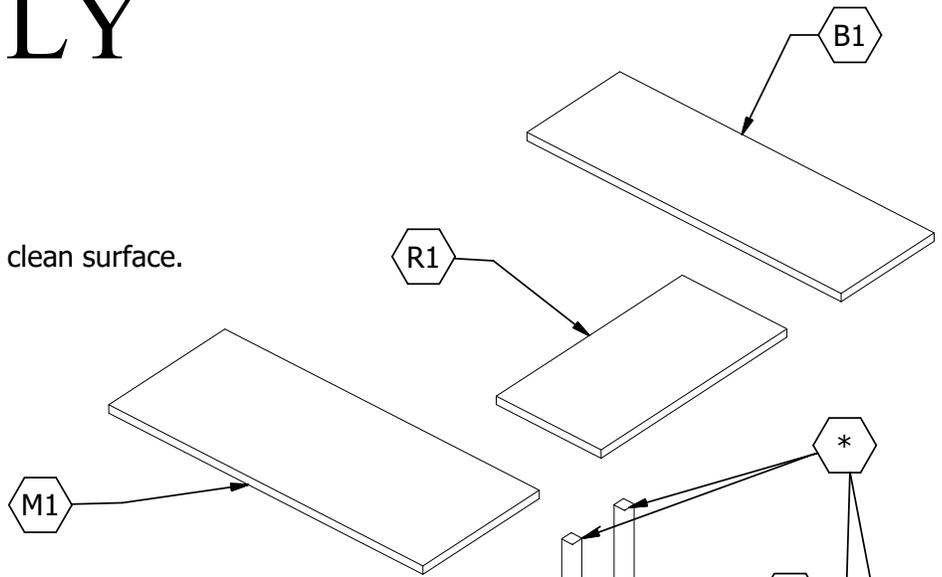


## STEP 2

Align legs using markings on the underside of the wood tops. Tabbed legs should be placed so that tabs are facing each other. Screw in all legs with (4) 14-10 lag bolts in each leg.

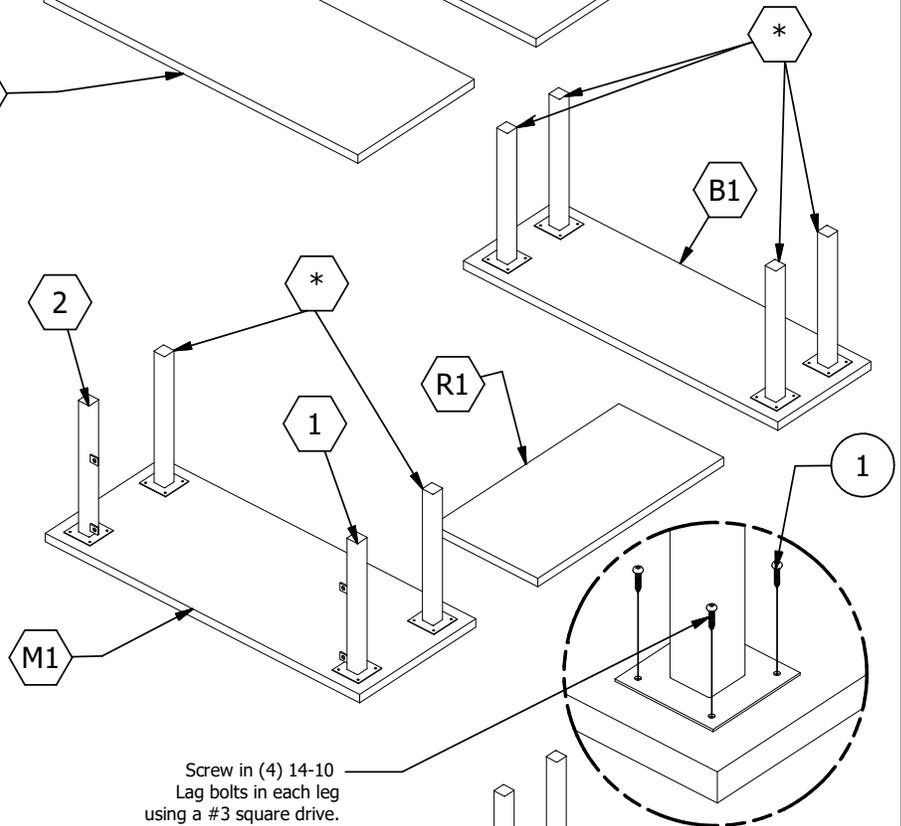

## STEP 3


Attach screen to front tabbed legs with (4) screen bolts and (4) screen nuts.

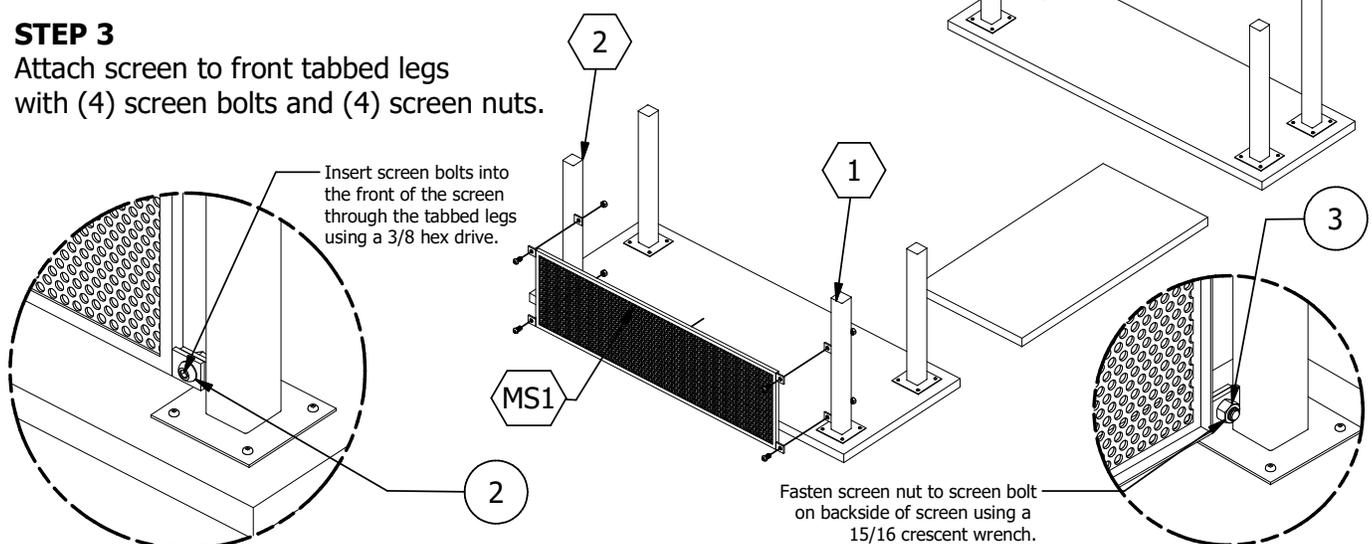


# ASSEMBLY

## STEP 4

Screw in (1) leveling foot in each leg.

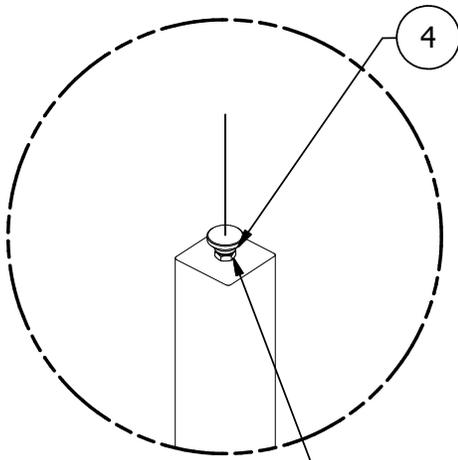


Screw in leveling foot into each leg with 9/16 crescent wrench.

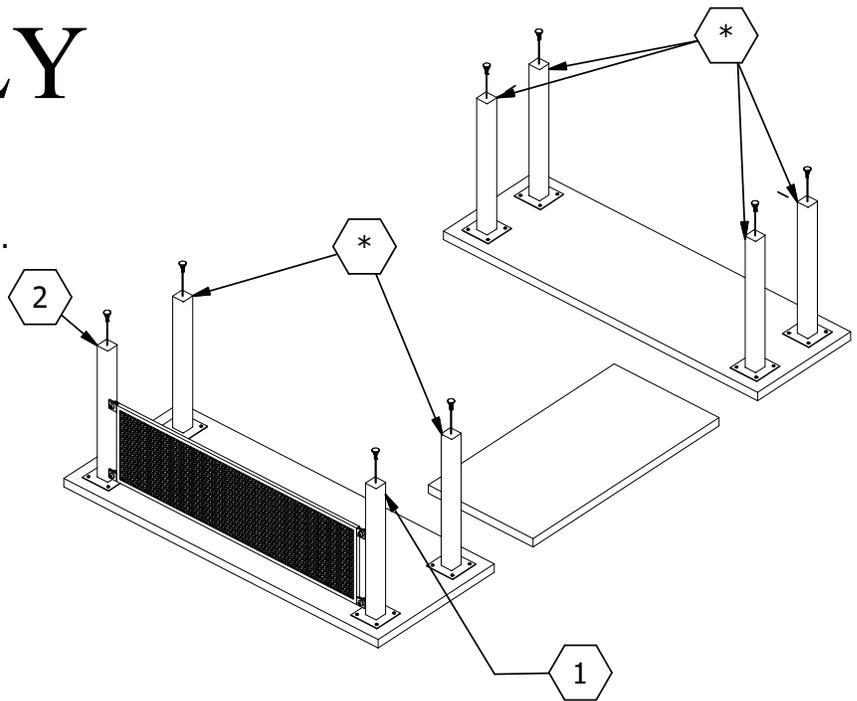


## STEP 5

Align splice plates following markings on backside of the main and back tops.

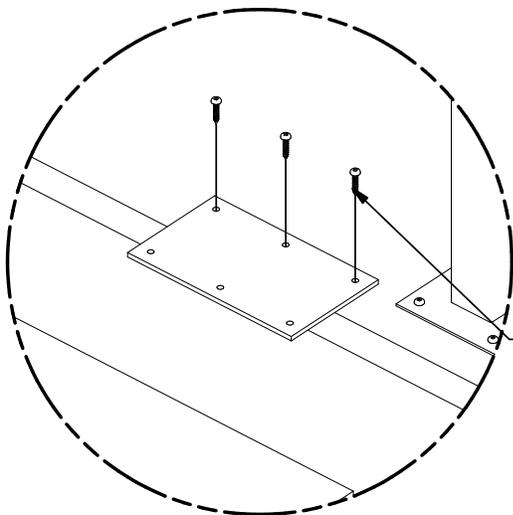



Screw in (3) 14-10 lag bolts in each splice plate on the underside of the main top to secure splice plates.

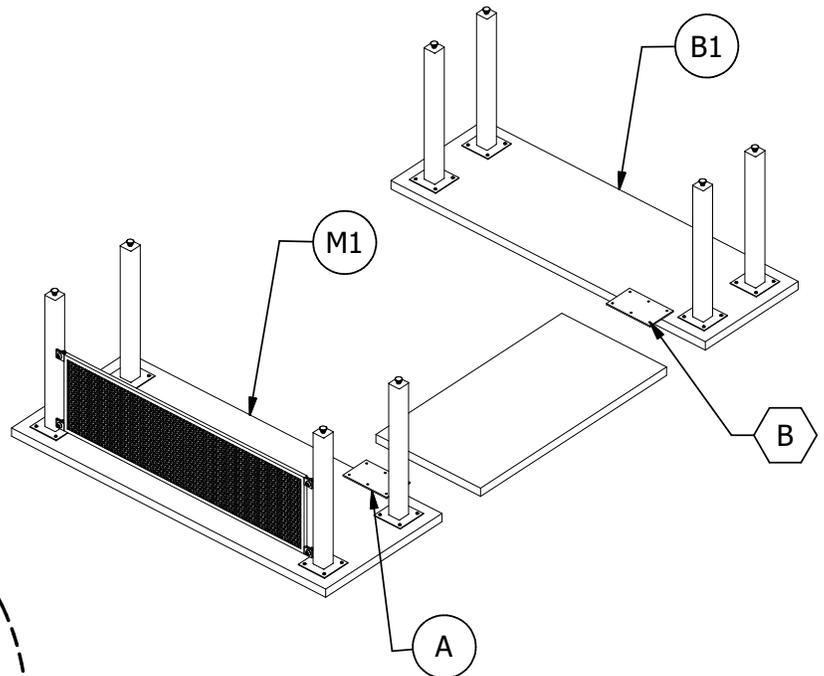

# ASSEMBLY

## STEP 6


Flip main and back desks to an upright position. Align return top in between main and back desks, resting the top on the two splice plates.

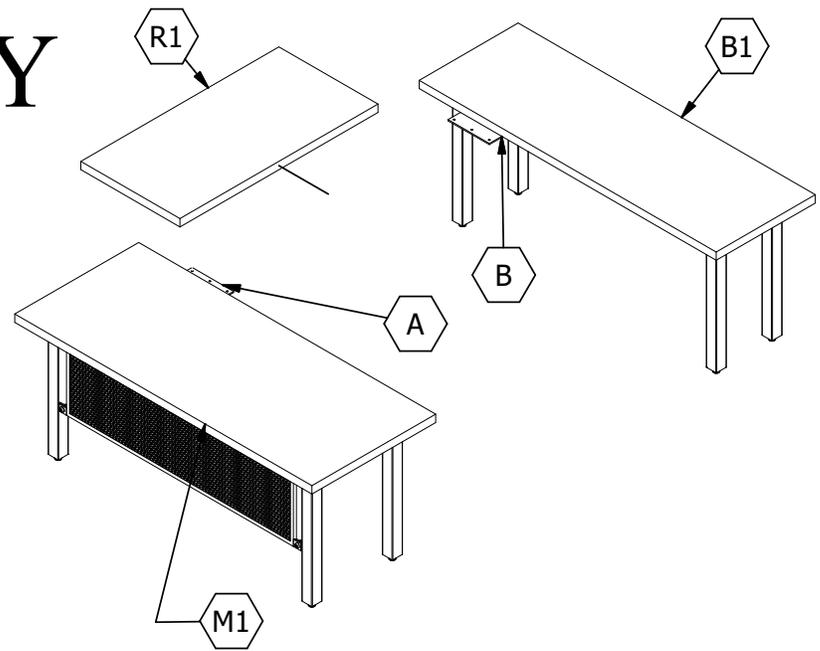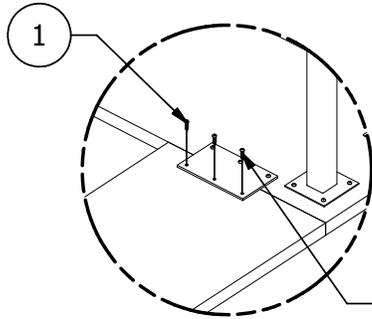

Screw in remaining (3) 14-10 lag bolts in each splice plate on the underside of the return top to secure splice plates.

## STEP 7

Enjoy your desk!

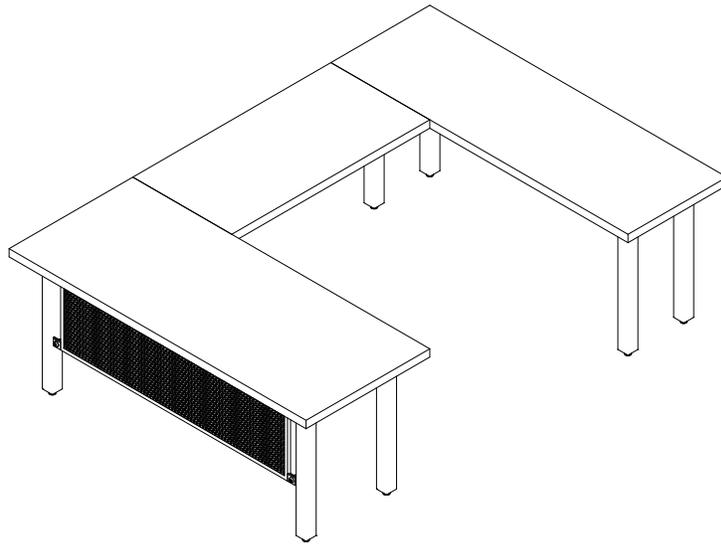

---

# CARE INSTRUCTIONS

To care for either wooden or metal surfaces of Iron Age Office products, gently wipe with a soft cloth dampened with water and a mild dishwashing liquid. Once satisfied, dry with a soft cloth.