


IA SINGLE SIT-STAND WITH MODESTY

Assembly Instructions

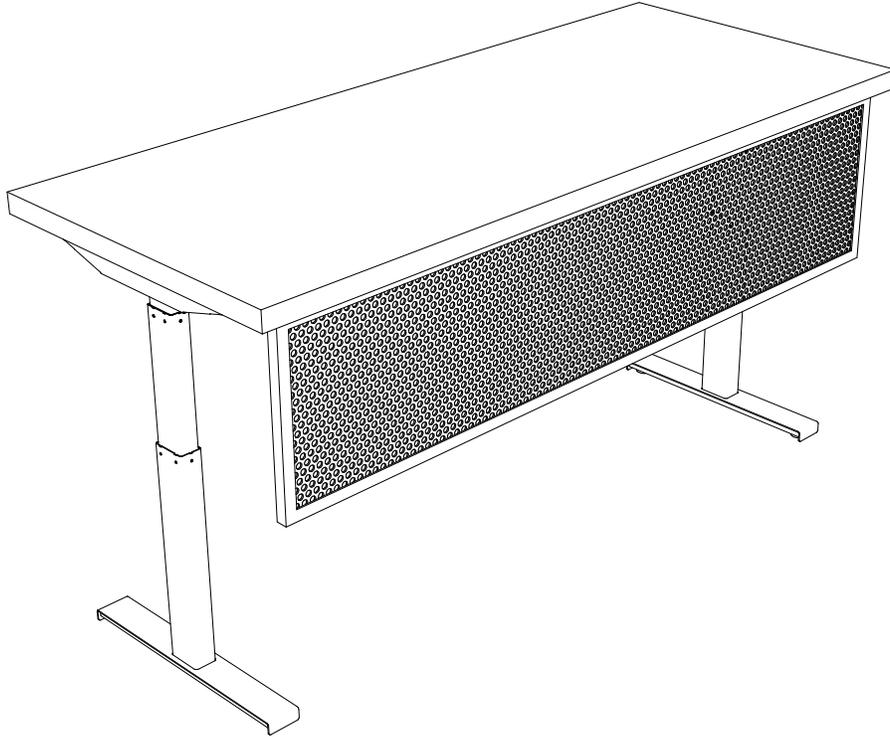

Thank you for your purchase!

Iron Age Office furniture is uniquely and individually fabricated. For this reason, your furniture is pre-assembled and labeled before shipping. Labels are marked on the underside of the furniture. The furniture is then deconstructed prior to shipping. Pieces that uniquely correspond can typically be found on the same pallet.

Assembly is best completed by keeping the pieces that correspond together. Clear your work area of anything that could scratch furniture surfaces. If possible, cover your work area with a clean, soft blanket. Carefully flip any wooden tops over and inspect the bottom sides for markings. Match legs, flat brackets, etc. to the appropriate labels.

If you need further assistance of any kind,
please contact:

Iron Age Office Operations Manager

Henry Dover

678-725-1473 (c)

hd@ironageoffice.com


HARDWARE

Screws are shown actual size. You may receive extra hardware with your unit.

Tools Required


1

14-10 LAG BOLTS
QTY: 5



9/16 Crescent Wrench


PARTS

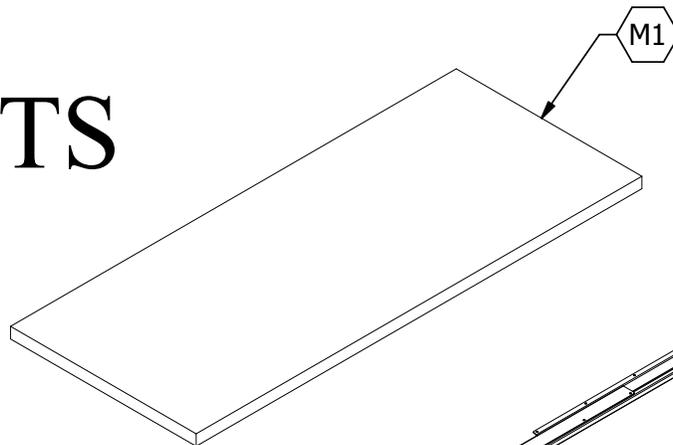

M1 MAIN TOP

SS SIT STAND BASE
*Instructions and hardware included
in sit stand packaging.

MS MODESTY SCREEN

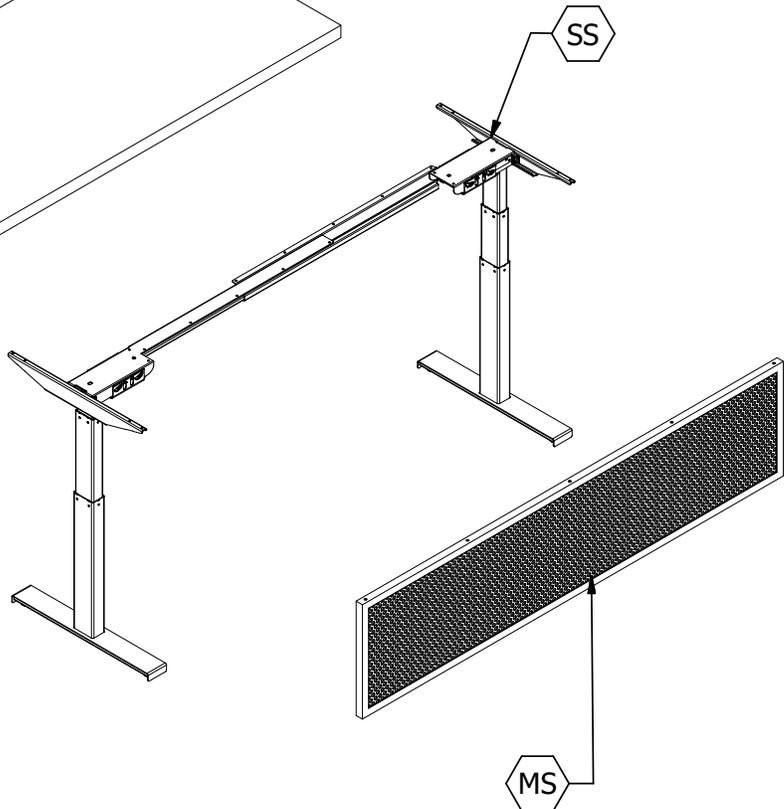

ASSEMBLY

STEP 1


Place wood top face down on a clean surface.

STEP 2

Assemble sit stand base according to package instructions. Align legs to wood top using markings on the underside of main top.



STEP 3

Flip desk to an upright position. Align modesty screen to underside of top using markings on the underside of top. Secure screen to desk with (5) lag bolts.

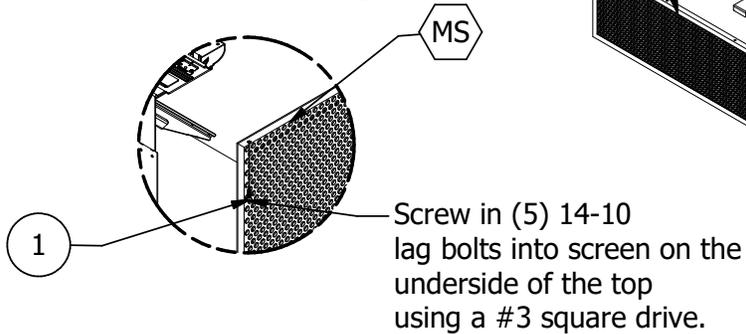

STEP 4

Enjoy your desk!

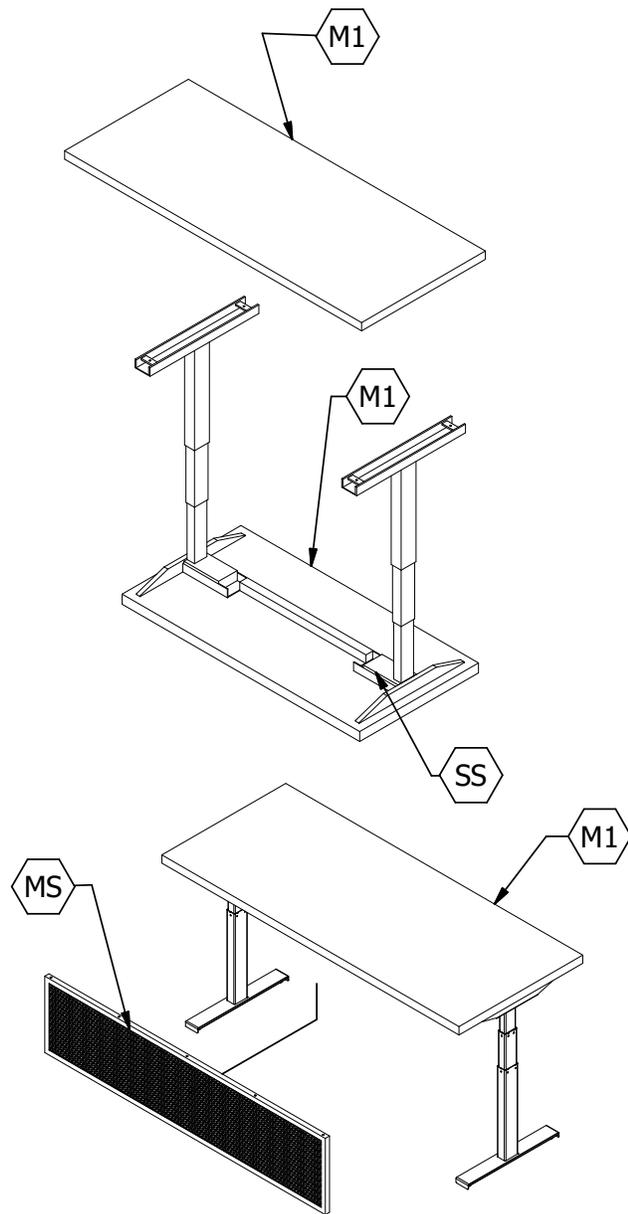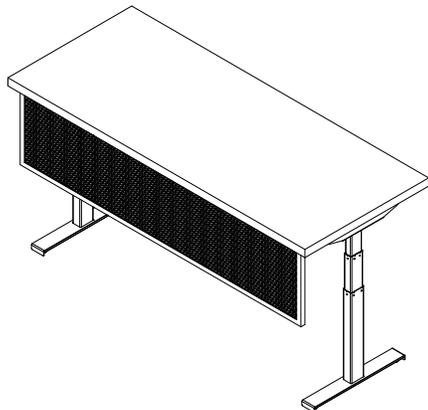

CARE INSTRUCTIONS

To care for either wooden or metal surfaces of Iron Age Office products, gently wipe with a soft cloth dampened with water and a mild dishwashing liquid. Once satisfied, dry with a soft cloth.