


KNIGHT RECEPTION DESK L-SHAPE

Assembly Instructions

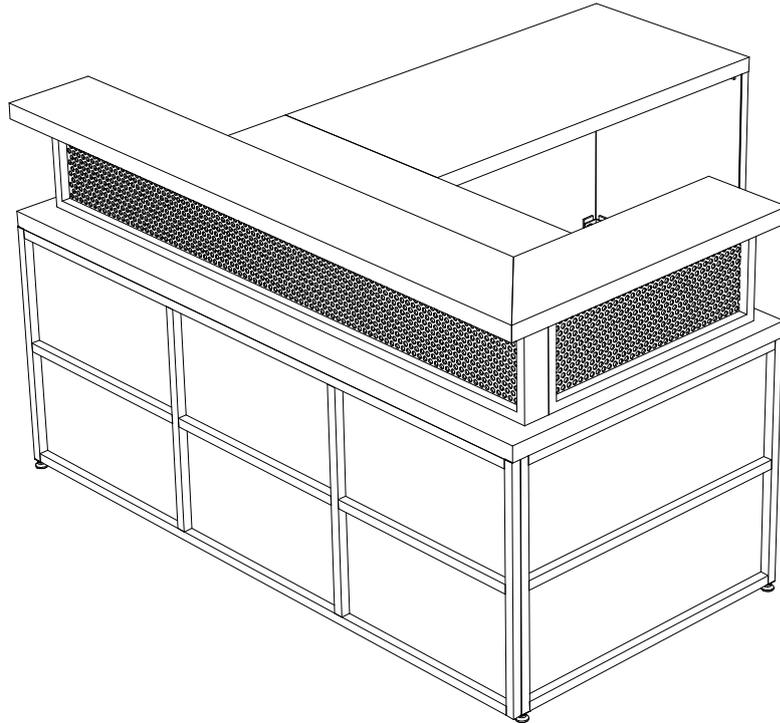

Thank you for your purchase!

Iron Age Office furniture is uniquely and individually fabricated. For this reason, your furniture is pre-assembled and labeled before shipping. Labels are marked on the underside of the furniture. The furniture is then deconstructed prior to shipping. Pieces that uniquely correspond can typically be found on the same pallet.

Assembly is best completed by keeping the pieces that correspond together. Clear your work area of anything that could scratch furniture surfaces. If possible, cover your work area with a clean, soft blanket. Carefully flip any wooden tops over and inspect the bottom sides for markings. Match legs, flat brackets, etc. to the appropriate labels.

If you need further assistance of any kind,
please contact:

Iron Age Office Operations Manager

Henry Dover

678-725-1473 (c)

hd@ironageoffice.com

HARDWARE

Screws are shown actual size. You may receive extra hardware with your unit.

Tools Required




#3 Square Drive



7/32 Hex Drive

PARTS


Depending on your transaction counter configuration, you may receive more or less parts than shown below.

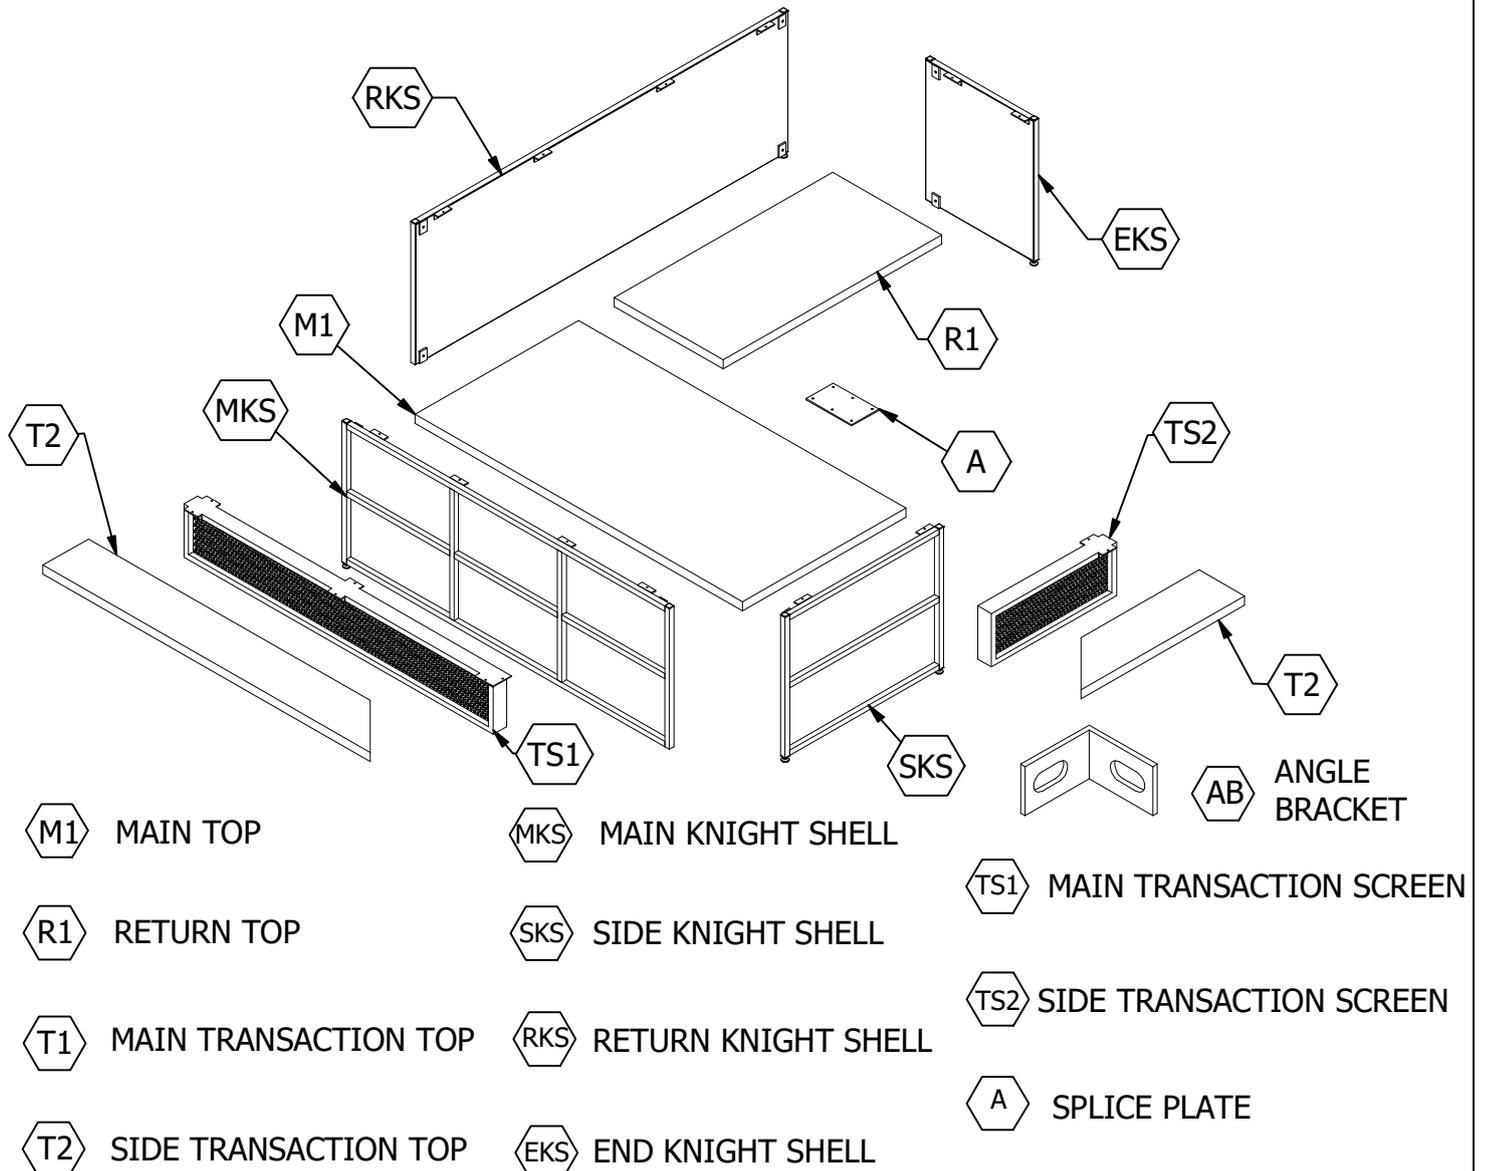


ASSEMBLY

STEP 1

Align main and side shells.

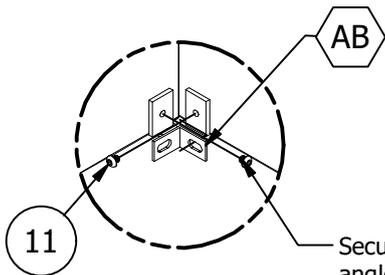


Secure main shell to side shell with angle bracket and (2) 3/8-16x3/8 bolts using a 7/32 hex drive at the top and bottom of joint.

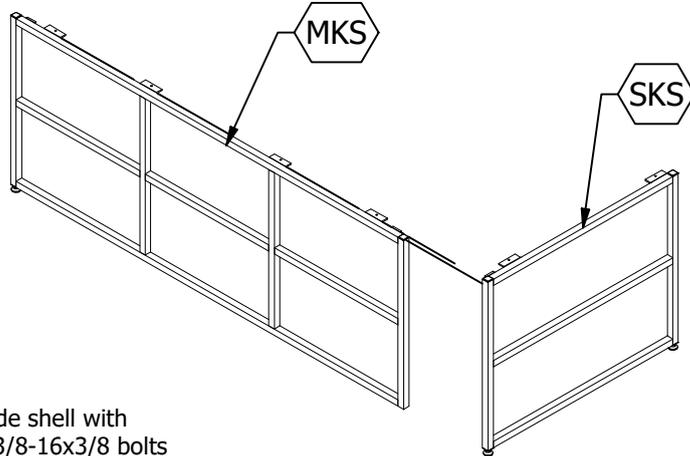


STEP 2

Align return shell to main shell and secure with 3/8-16x3/8 bolts and angle brackets like step 1.

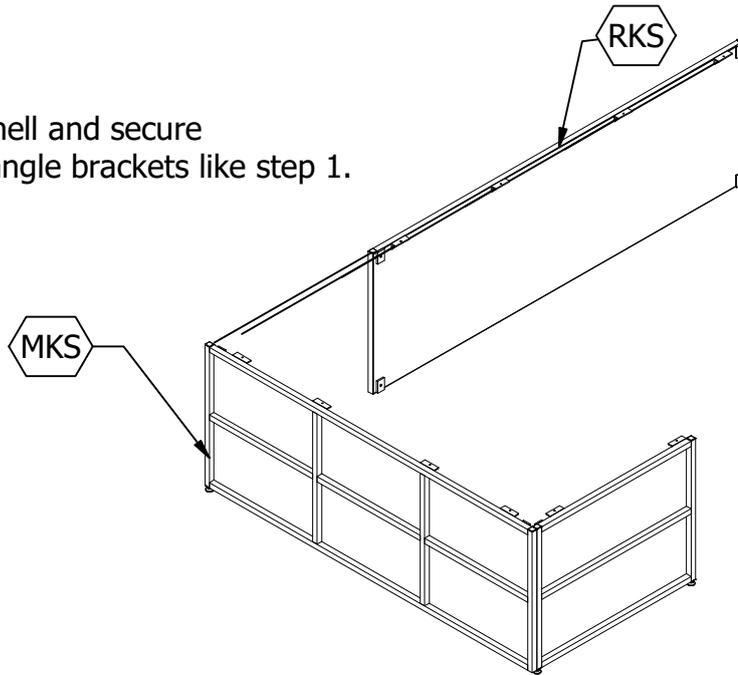

STEP 3


Align end shell to return shell and secure with 3/8-16x3/8 bolts and angle brackets like step 1.

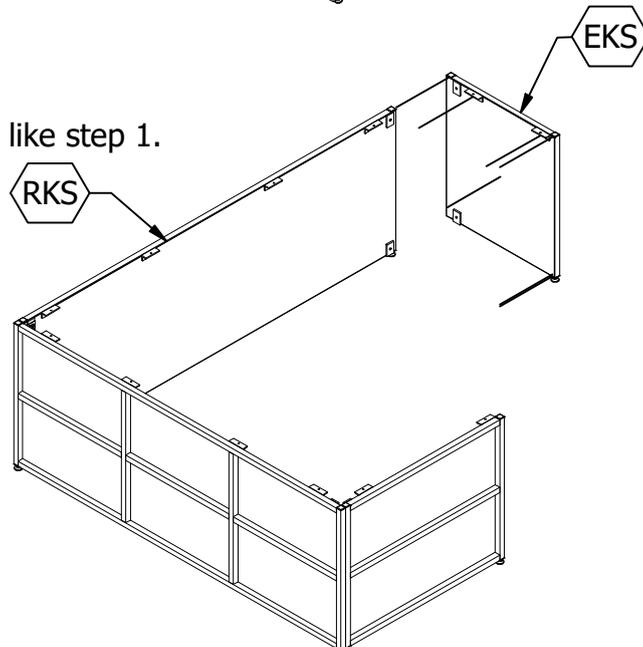


ASSEMBLY

STEP 4

Align main top to assembled shell.

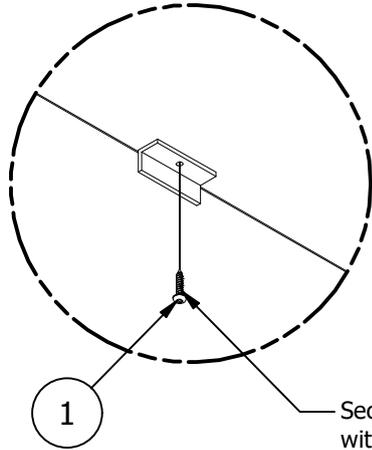


Secure main top to assembled shell with lag bolts using a #3 square drive.

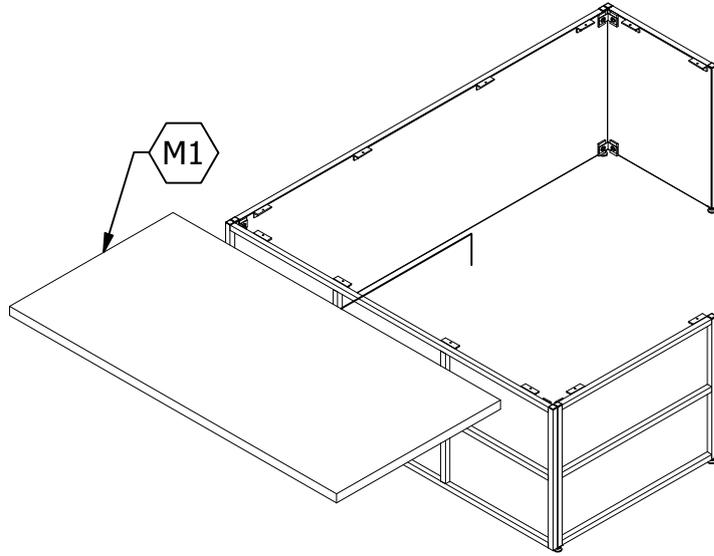


STEP 5

Align return top to assembled shell and secure with lag bolts like step 4.

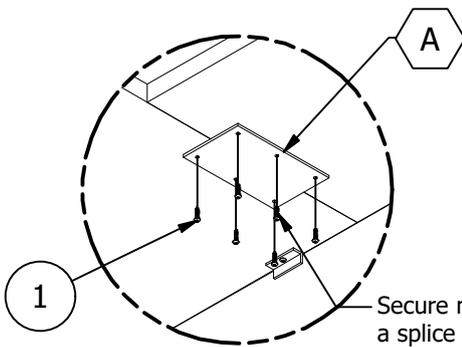


Secure main top and return top together with a splice plate at connection and lag bolts.

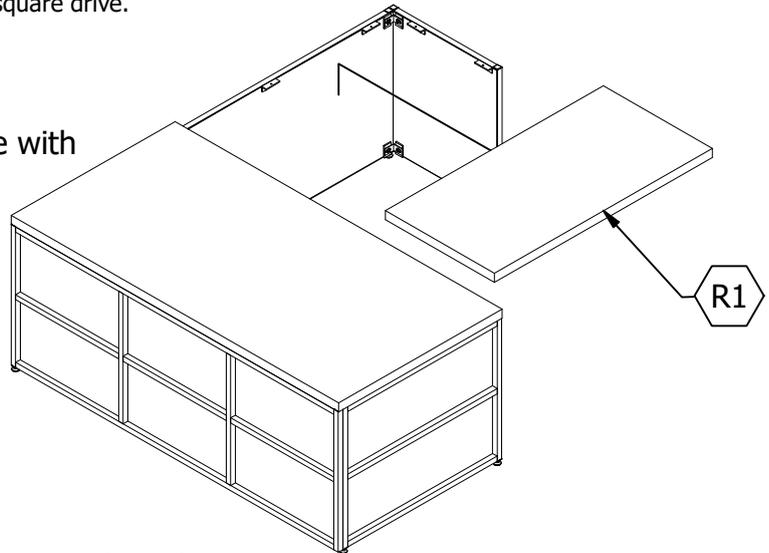


STEP 6

Align transaction screen to main top.

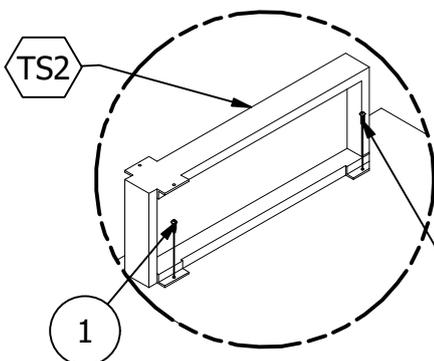


Secure transaction screen to main top with lag bolts using a #3 square drive.

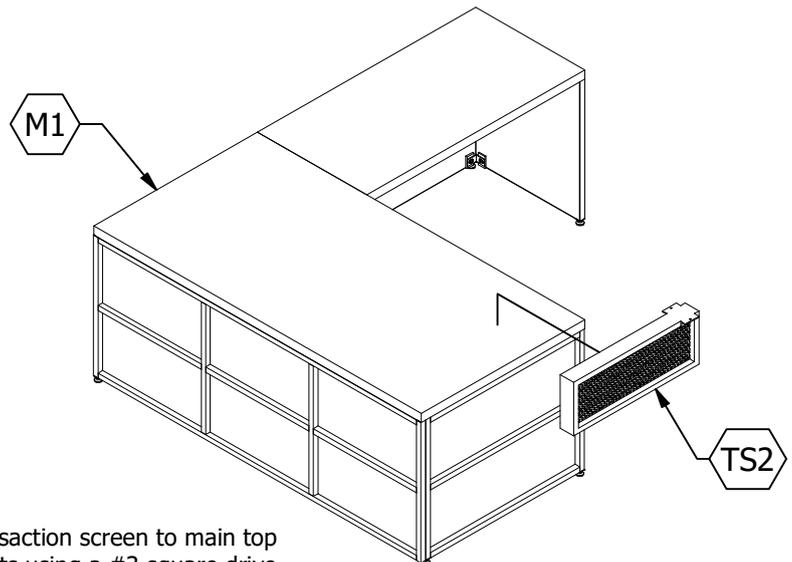

ASSEMBLY

STEP 7


Align main transaction screen to main top and side transaction screen. Secure with lag bolts like step 6.

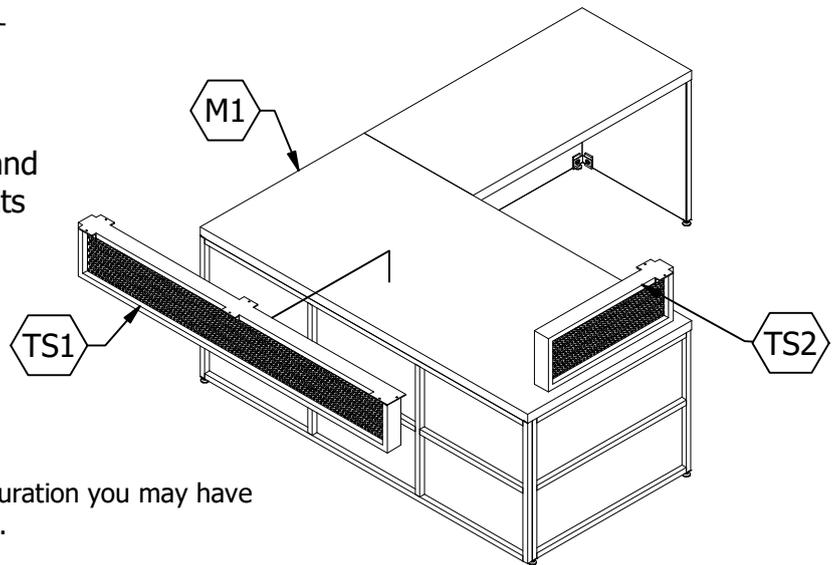

*Depending on your transaction counter configuration you may have additional transaction screens to secure to tops.


STEP 8

Align transaction tops to transaction screens.

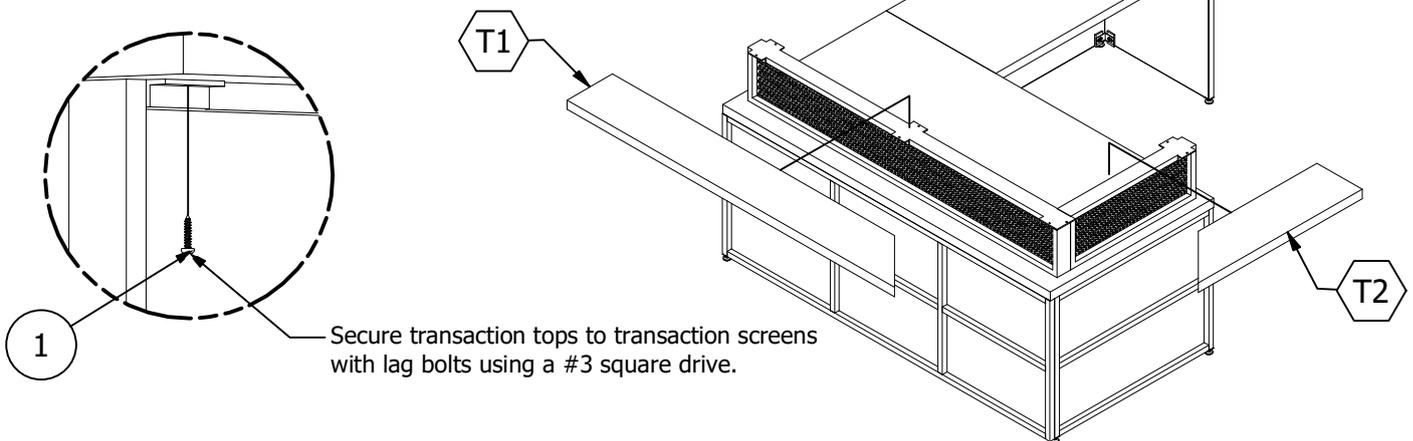

STEP 8

Enjoy your desk!

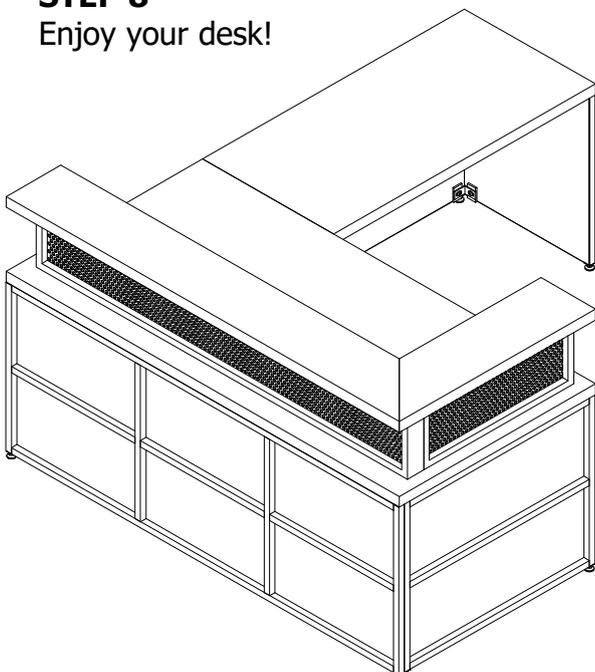

CARE INSTRUCTIONS

To care for either wooden or metal surfaces of Iron Age Office products, gently wipe with a soft cloth dampened with water and a mild dishwashing liquid. Once satisfied, dry with a soft cloth.